


# Samsung Oven - HSB-N361B model

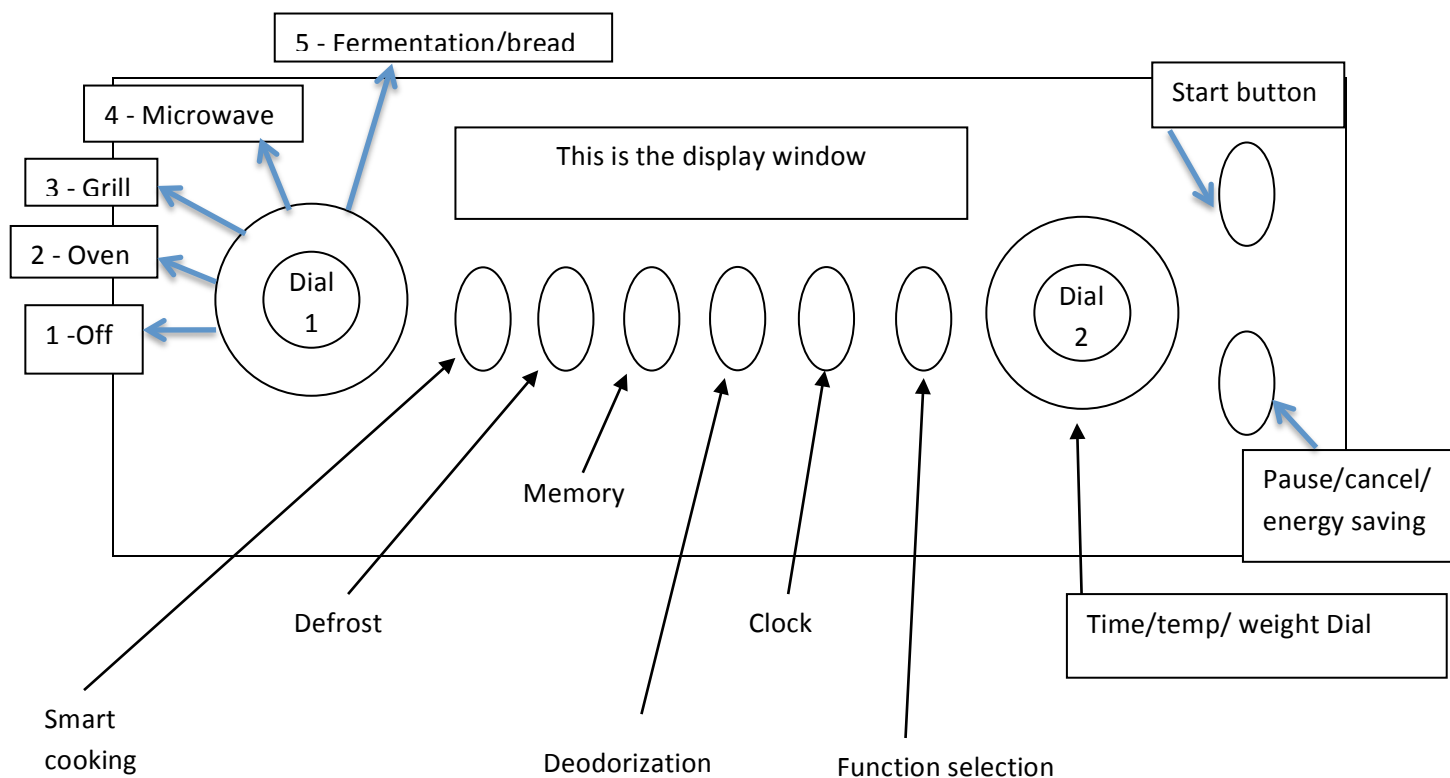

## Some helpful hints

## How to use the oven (for baking, roasting, etc...)

(This is a convection oven – you need to use a slightly lower temperature than conventional ovens)

- Take out the glass revolving microwave tray and the wheels underneath
- Select 'Oven' by using dial #1 (2<sup>nd</sup> position)
- Adjust temperature by using dial #2
- Turn the oven on by pushing the Start Button
- If you want to SET TIMER by using dial #2, once the oven is on and you can hear the fan working (this only deals with minutes, so for 1 ½ hours – 90 mins)

**NB** - if you ever open the oven door to check your what you are roasting or baking, the oven switches off. You have to press the Start button again, and the oven will continue to work as will the timer.

### To turn the oven off

- Press the Pause/Cancel/Energy saving button
- Turn Dial #1 to off (1<sup>st</sup> position)

---

## How to use the grill

- Take out the glass revolving microwave tray and the wheels underneath
- Select 'Grill' by using dial #1 (3<sup>rd</sup> position)
- Turn the grill on by pushing the Start Button

### To turn the grill off

- Press the Pause/Cancel/Energy saving button
  - Turn Dial #1 to off (1<sup>st</sup> position)
- 

## How to use the microwave

- Take out the baking tray
- Make sure the glass revolving microwave tray and the wheels underneath are in the oven
- Select 'Microwave' by using dial #1 (4<sup>th</sup> position)
- SET TIMER by using dial #2, once the oven is on and you can hear the fan working (this only deals with minutes and seconds)
- Turn the microwave on by pushing the Start Button

### To turn the microwave off

- Press the Pause/Cancel/Energy saving button
  - Turn Dial #1 to off (1<sup>st</sup> position)
- 

## How to set the clock

- Select 'Clock' button
  - Hour number will flash
  - Set the correct hour by using Dial #2
  - Select 'Clock' button again
  - Minute number will flash
  - Set the correct minutes by using Dial #2
  - Push clock button again to set changes
- 


## How to activate the child lock

- Hold the **Memory** button and the **Deodorization** button down simultaneously for **3 secs**

### How to deactivate the child lock (as above)

- Hold the **Memory** button and the **Deodorization** button down simultaneously for **3 secs**
-

## How to use the hob

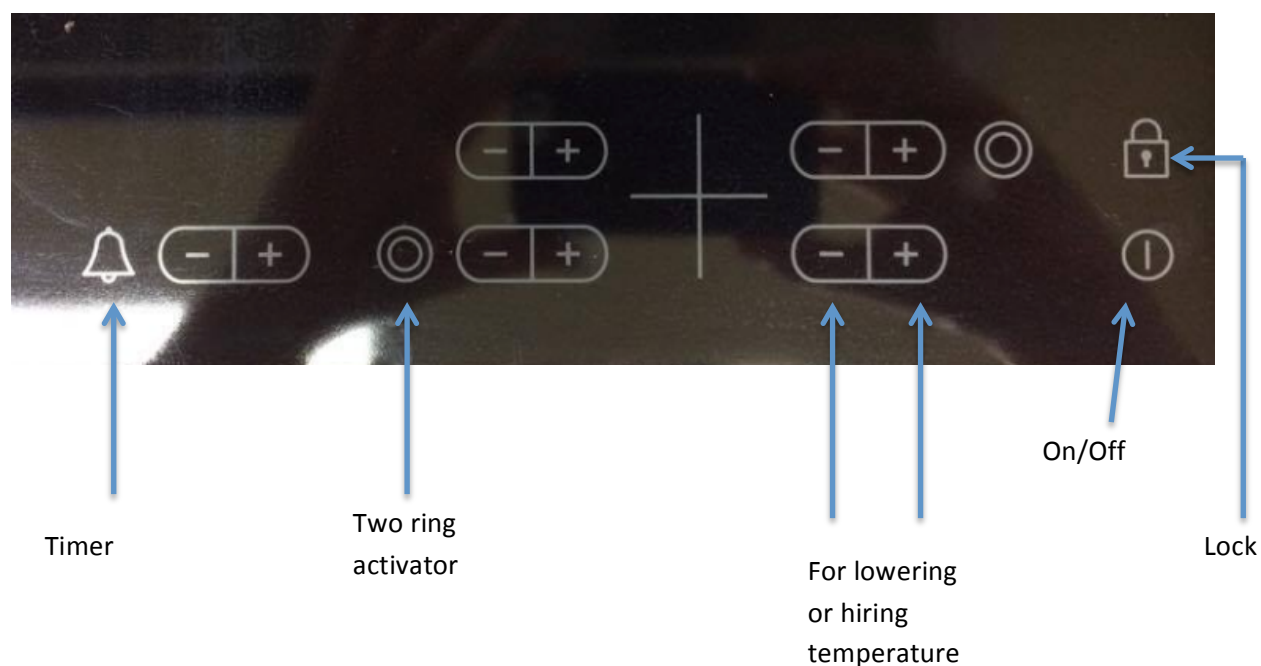

### To use the rings

- Press and hold the lock for 3 secs
- Press and hold the on/off for 3 secs
- Select the ring you wish to turn on and press the + sign (it should go to Number 5 temperature by default)
- Lower or higher the ring temperature as needed (maximum of 9)
- To turn the ring off, either go one more than 9 (-- ) or one less than 1 (-- )

(Continued below)

## To activate the two ring option



On the two larger rings there is an option to use two rings instead of one (for boiling or frying for example)

- Turn on the ring as explained before
- Then press and hold the double ring icon
- Turn off in the usual way

## To use the timer for the rings

- When the ring is activated, press the bell
- Use the + or – to set the time you want
- The ring will turn off when the time is up (it will play a little tune to let you know it's turning itself off)